


Brobizz




Installation instruction

- 1** Clean mounting area with a wet cloth.

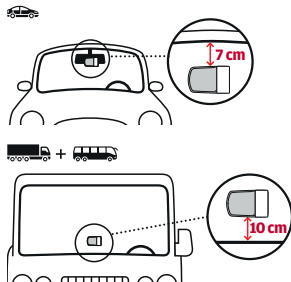

- 2** Attach reclosable fastener to tag.

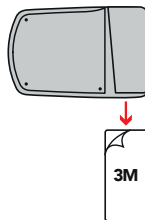

- 3** Attach tag to inside of dry windscreen. Minimum temperature 15 °C.



Open here!



brobizz.com